


Installing the Novabrik

With all the prep work completed, you are ready to install Novabrik.

- Install the Novabrik on the Starter Strip*. At every furring strip, hold down the face of the brick and drill holes at a downward angle (around 30°).
- Hold the brick flat on the wall and anchor it with a # 8 or # 10 x 2 1/2" (64mm) screw at a slight downward angle until the head touches the brick. Do not over tighten.
- Be sure to mix Novabrik from different pallets as you stack and install. This will blend the Novabrik together.
- Check the leveling at every fourth course before fastening and make adjustments if necessary. A long level or straight edge can help.
- Use your rubber mallet and wood straight edge to tap the bricks in place and brush down with a small broom to remove dirt and dust.

**Note: See the *Materials take off* section for screw specifications
Refer to *Starter & Furring Strip Installation* section.**

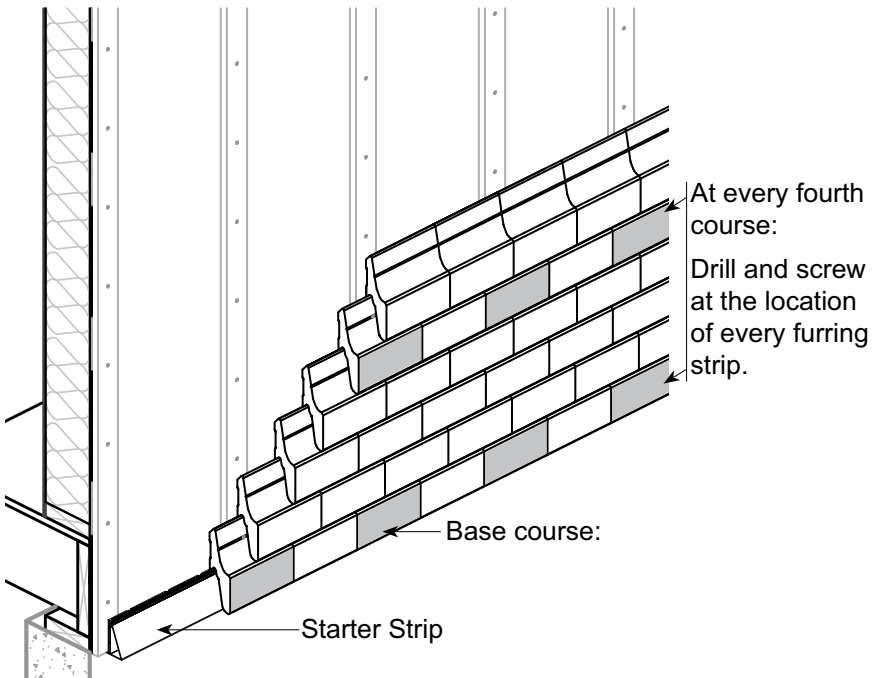

Note: Use #8 or #10 corrosion-resistant screws to fasten furring strips to the studs. Make sure the screws penetrate at least 1 1/4" (32mm) into the studs.